



M2 Antenna Systems, Inc. Model No: Relay/Preamp Dual Polarity EME

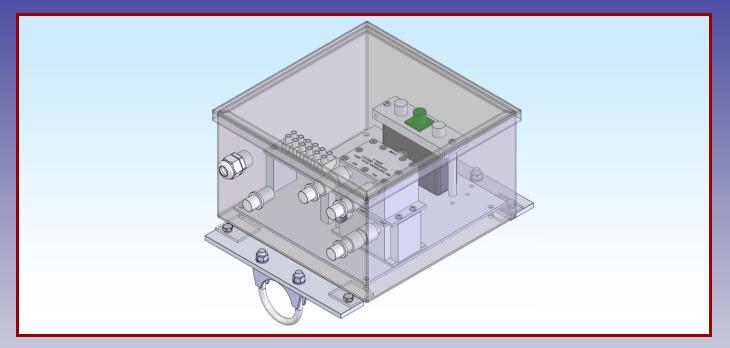


SPECIFICATIONS:

MODEL NUMBER	PREAMP/RELAY HOUSING
PREAMP (VHF).	12 VDC @ 1 AMP
COAX SWITCH (M2 HPR-1)	24 VDC @ 1 AMP
ENCLOSURE SIZE	W=8"/ H=6" / D=8"
COLOR	GREY
CONTROLLER (RECOMMENDED)	M2 S2 SEQUENCER
CONTROL WIRE	8 CON. # 22 GA.
MOUNTING	2" U-BOLT / ADAPTABLE

Componets & Input Panel Overview

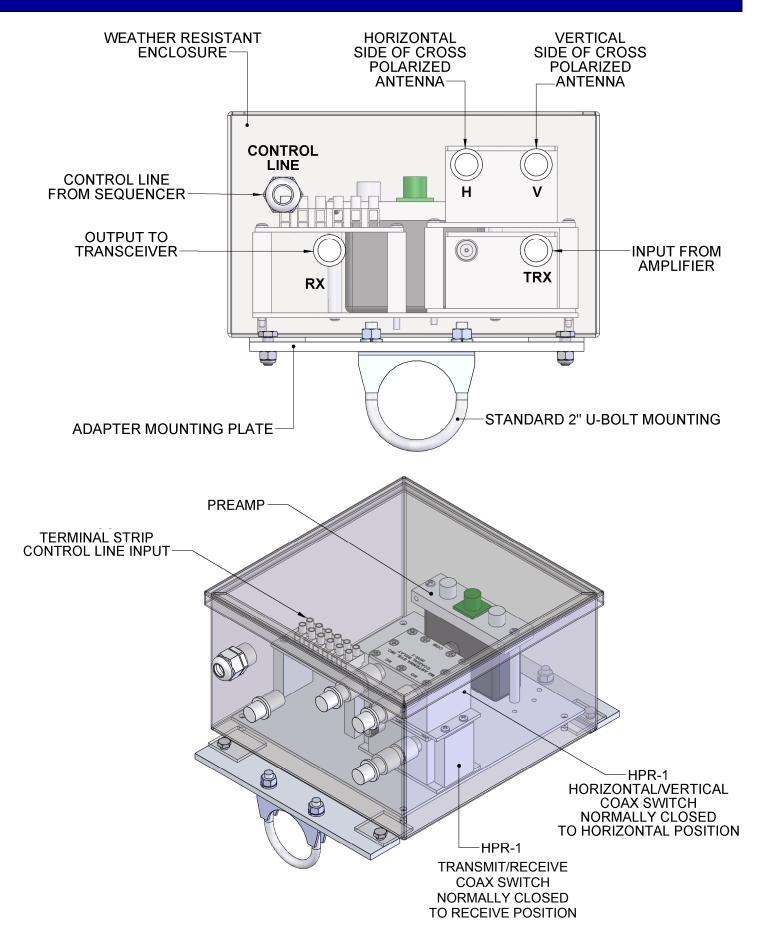


Relay/Preamp Housing Terminal Assignments

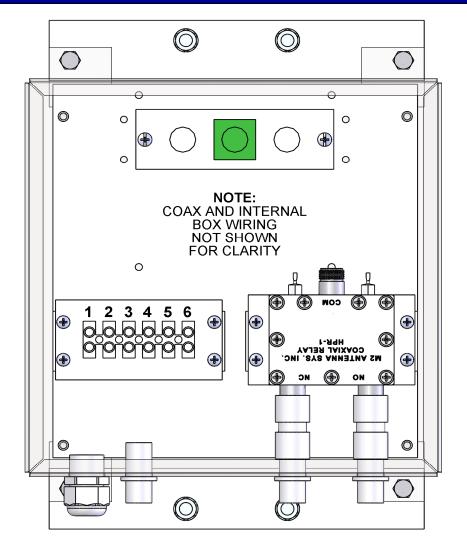

Terminal assignments are very important, so take your time when doing the wiring. Damage can be caused to the Preamp and Power Relays if connections are made incorrectly.

- TERMINAL 1: +12 VDC to power the Preamp. Terminal # 1 from the M2 EME Sequencer S2
- **TERMINAL 2:** This is the Preamp control line. When the sequencer is "Keyed", this line will put the Preamp in a *NON* operating state for Transmit. **Terminal # 2 from the M2 EME Sequencer S2**
- **TERMINAL 3:** This is the Transmit / Receive Relay control line. When the sequencer is "Keyed" the RF Power, Transmit / Receive Relay will switch to the Transmit State. **Terminal # 3 from the M2 EME Sequencer S2**
- TERMINAL 4: Constant +28 VDC to power the Transmit / Receive Relay. Terminal # 8 from the M2 EME Sequencer S2
- **TERMINAL 5:** Switched +28 VDC to power the Horizontal / Vertical Polarization relay. **Terminal # 7 from the M2 EME Sequencer S2**
- TERMINAL 6: Ground terminal. Terminal #10 from the M2 EME Sequencer S2
- **TERMINAL 7:** Normally open and not used. *If the M2 2M-PA preamp is built into the Relay/Preamp Housing,
- а

EME Relay/Preamp Housing Schematic

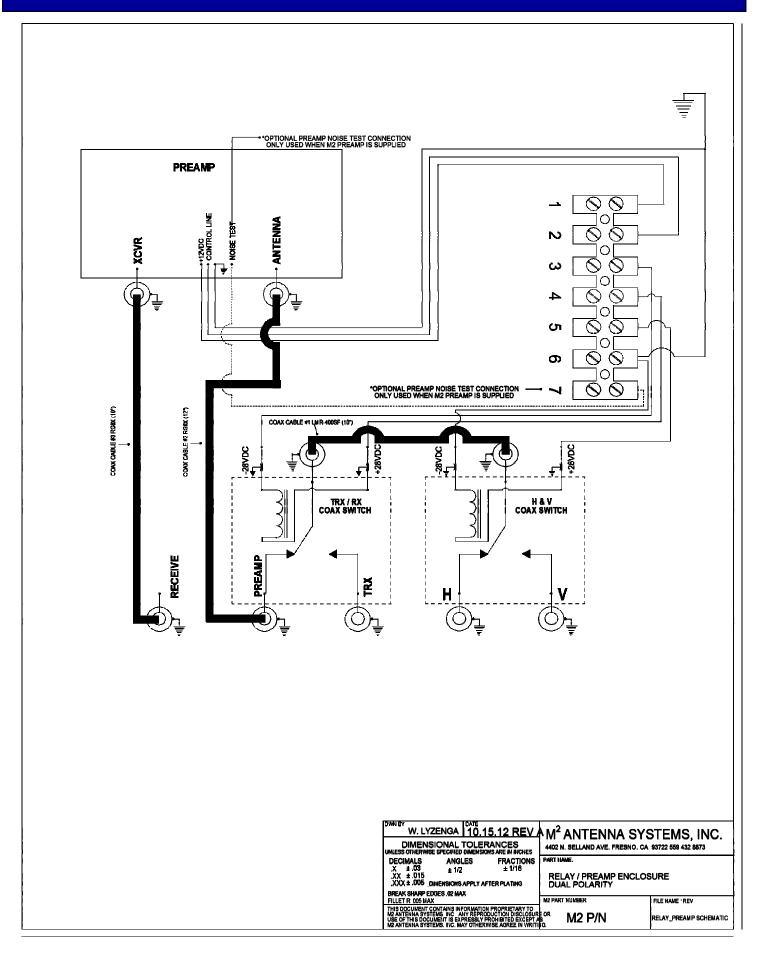

EME Relay/Preamp Housing Parts List

DESCRIPTION	QTY
RELAY / PREAMP HOUSING	1
MOUNTING PLATE, .250 X 1.5" X 9"	2
USER MANUAL	1


IN HARDWARE BAGS:

U-BOLT & CRADLE, 2"	2
NUT, 5/16-18 HEX	4
WASHER, 5/16	4
BOLT, 1/4-20 X 3/4" SS	4
NUT, 1/4-20 LOCKING	4

M² ANTENNA SYSTEMS, INC.

4402 N. SELLAND AVE. FRESNO, CA 93722 (559) 432-8873 FAX: 432-3059 www.m2inc.com Email: sales@m2inc.com

12 Month Limited Warranty Information

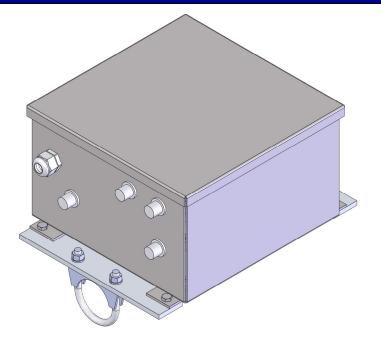

This warranty gives you specific legal rights. You may also have other rights which will vary from state to state or province to province.

M2 warrants the RELAY / PREAMP HOUSING unit against defects in material and workmanship for a **pe**riod of 12 months from date of purchase. During the warranty period, M2 will, at its option, either repair or replace products or components which prove to be defective. The warranty shall not apply to defects or damage resulting from:

- Improper or inadequate maintenance by user
- Improperly prepared installation site
- Unauthorized modifications or misuse
- Accident, abuse, or misapplication
- Normal wear

M2 specifically does not warrant this product for any direct, indirect, consequential, or incidental damages arising from the use or inability to use the product. Some states or provinces do not allow the exclusion or limitation of liability for consequential or incidental damages so the above limitation may not apply.

In the event repair or replacement are necessary, purchaser shall contact M2 for return authorization. In many cases this contact can simplify and expedite the repair / replacement process and help reduce costs and downtime.

The purchaser shall be responsible for packing the product properly for return and for charges to ship the product to **M2**. Always include with the shipment, a statement detailing the problem / failure and any other pertinent observations. Insuring the product for shipment is recommended. Use the original packing materials whenever possible. **M2** is responsible for charges (in the United States) to return the repaired / replacement product only where warranty service is involved.